

## SETUP AND SAFETY EN

- The device is designed for the playback of audio signals. Any other use is expressly prohibited.
- Protect the device from moisture (water drops or splashes).
- Do not place any vessels such as vases on the device. These may be knocked over and spill fluid on the electrical components, thus present a safety risk.
- Do not place any naked flames such as candles on the device.
- Only use the device in a moderate climate.
- Do not cover the ventilation slots with newspapers, table cloths, curtains, etc.
- When deciding where to place

the device, please note that furniture surfaces are covered by various types of varnish and plastic, most of which contain chemical additives. These additives can corrode the device supports, leaving residues on the furniture surfaces which can be difficult or impossible to remove.

- Do not use any cleaning agent, as this may damage the casing. Clean the device with a clean, moist leather cloth.
- Do not expose the batteries to extreme heat, caused for example by direct sunlight, heaters or fire.
- Keep new and used batteries away from children. If the bat-

tery compartment does not close securely, stop using the product and keep it away from children.


- Remove the batteries when they are flat or when you know that the device will not be used for a long period of time. The manufacturer accepts no liability for damage caused by leaking batteries.
- Batteries, including those which do not contain heavy metal, should not be disposed of with household waste. Always dispose of used batteries in accordance with local environmental regulations.
- To prevent battery leakage which may result in physical injury, property damage or dam-

age to the clock radio install the batteries correctly. The polarity is marked on the base of the battery compartment.

- Never open the device casing. No warranty claims are accepted for damage caused by incorrect handling.
- If malfunctions occur due to static electrical charges or fast transient overvoltage (burst), reset the device. To do this, pull out the mains adapter and connect it again after a few seconds.
- Unplug the mains adapter to completely disconnect the device from the mains.
- Prolonged listening at loud volumes with the earphones can damage your hearing.

### Compliance with the WEEE Directive and Disposing of the Waste Product:

This product complies with EU WEEE Directive (2012/19/EU). This product bears a classification symbol for waste electrical and electronic equipment (WEEE).

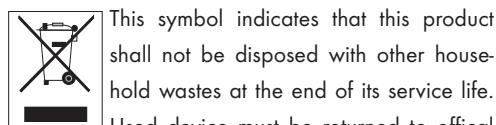

This symbol indicates that this product shall not be disposed with other household wastes at the end of its service life. Used device must be returned to official collection point for recycling of electrical and electronic devices. To find these collection systems please contact to your local authorities or retailer where the product was purchased. Each household performs important role in recovering and recycling of old appliance. Appropriate disposal of used appliance helps prevent potential negative consequences for the environment and human health.

### Compliance with RoHS Directive

The product you have purchased complies with EU

RoHS Directive (2011/65/EU). It does not contain harmful and prohibited materials specified in the Directive.

### Package information

Recycling symbol. Packaging materials of the product are manufactured from recyclable materials in accordance with our National Environment Regulations. Do not dispose of the packaging materials together with the domestic or other wastes. Take them to the packaging material collection points designated by the local authorities.

This device is noise-suppressed according to the applicable EU directives.

This product fulfils the European directives 2014/53/EU, 2009/125/EC and 2011/65/EU.

Never open the device casing. The manufacturer will not accept any liability for damage resulting from improper handling.

You can find the CE declaration of conformity for the device in the form of a pdf file on the Grundig Homepage [www.grundig.com/downloads/doc](http://www.grundig.com/downloads/doc).

The type plate is located at the rear of the device.

## BATTERY OPERATION

- Remove the battery cover on the back of the unit by sliding the cover in the direction of the arrow.
- Insert four LR6 (AA size) batteries into the spaces in the compartment. Take care to ensure all batteries are inserted with the correct polarity as shown on the base of the battery compartment. Replace the battery cover.
- Reduced power, distortion and a ‘stuttering’ sound are all signs that the batteries may need replacing.
- If the radio is not to be used for an extended period of time it is recommended that the batteries are removed from the radio.

We would recommend for economy that the radio is used via the DC adaptor whenever possible with battery operation for occasional use only.

**IMPORTANT:** The batteries should not be exposed to excessive heat such as sunshine, fire or the like. After use, disposable batteries should if possible be taken to a suitable recycling centre. On no account should batteries be disposed of by incineration.

## USING A AC ADAPTOR

- 1 Place your radio on a flat surface and plug the mains adaptor into the DC input socket located on the right-hand side of your radio (marked ‘DC’) ensuring that the plug is pushed fully into the socket.
- 2 Plug the other end of the mains adaptor into a standard 13A mains socket outlet and switch on the wall socket. Whenever the adaptor is used the batteries are automatically disconnected.

The AC adaptor should be disconnected from the mains supply and from the radio when not in use.

**IMPORTANT:** The mains adaptor is used as the means of connecting the radio to the mains supply. The mains socket used for the radio must remain accessible during normal use. In order to disconnect the radio from the mains completely, the mains adaptor should be removed from the mains socket outlet completely.

## DAB MODE

- Fully extend the telescopic aerial located on the rear of your radio. The aerial should be fully extended and positioned vertically for optimum reception.
- Press and release the »ON/OFF« button to switch on your radio. The display will show »GRUNDIG« for a few seconds. After each use

the radio will remember the mode used and then switch on in that mode the next time that it is used.

- If this is the first time that the radio has been used a scan of the Band III DAB channels will be carried out. This is known as »AUTO TUNE«. After scanning the DAB channels, the radio will switch to FM and execute auto scan and store the available FM stations into FM presets. These operations will be ended when the 20 FM presets are full or completes scanning the whole FM band. If the radio has been used before, the last used station will be selected.
- During Auto tune each group of stations will be detected and the station count will be updated.
- When the scan is completed the first station (in numeric-alpha order 0...9, A...Z) will be selected. The first station in the list of stations found during scanning will be played.

If no signal is found, then »OFF AIR« will be displayed and it may be necessary to relocate your radio to a position giving better reception. You should then carry out the Auto tune again to find stations.

- Your radio has an indicator on the display to indicate the strength of the DAB radio signal being received.

**Note:** When switched on for the first time, the radio will set the volume to a moderately high level, in case the broadcast is very quiet. After you have set the volume with »VOLUME« buttons, the radio will remember the setting that you have applied for the next time that it is used.

### Selecting a station

Press and release the »ON/OFF« button to switch on your radio.

Press and release the »DAB/FM« button until the »DAB« mode is selected. The display will show the name of the radio station currently selected.

Press and release the »TUNING UP« or »DOWN« button to step through the list of available stations.

When the desired station name appears on the display, press and release the »SELECT/INFO« button to select the station. The radio will select the new station.

Adjust the or »+« button to the required setting.

**Note:** If after selecting a station the station does not connect it may be necessary to relocate your radio to a position giving better reception.

### Secondary services

- Certain radio stations have one or more secondary services associated with them. If a station has a secondary service associated with it the secondary service will then appear immediately after the primary service as you press and release the »TUNING UP« or »DOWN« button.
- To tune to the secondary service, press and release the »SELECT/INFO« button. Most second-

ary services do not broadcast continually and if the selected service is not available, the radio will re-tune to the associated primary service.

### Display mode

Your radio has a range of display options when in DAB mode:

- Press and release the »SELECT/INFO« button to cycle through the various modes. All display options except the text display will revert to the clock display after 60 seconds.

- a. Station name : Displays the station name being listened to.
- b. Scrolling text : Displays scrolling text messages such as artist/track name, phone in number, etc.
- c. Programme type : Displays type of station being listened to e.g. Pop, Classic, News, etc.
- d. Signal Strength : Displays the signal strength. The minimum signal marker (|) shows the

minimum signal strength needed for good DAB reception. The signal indicator chevrons increase or decrease showing the changing signal strength as you adjust the telescopic aerial or your radio position.

- e. Multiplex Name : Displays name of multiplex to which the current station belongs.
- f. Frequency : Displays the frequency for the currently tuned DAB station.
- g. Bit rate : Displays the digital bit rate for the currently tuned DAB station.
- h. Time : Displays current time.
- i. Date : Displays current date.

### Finding the new stations

From time to time, new DAB radio stations may become available. Or you may have moved to a different part of the country. In this case you may need to .cause your radio to scan for new stations

- 1 Press and release the »ON/OFF« button to switch on your radio.
- 2 If needed, press and release the »DAB/FM« button until the DAB mode is selected.
- 3 Press and release the »MENU« button. The DAB menu will show on the display. Press and release the »TUNING UP« or »DOWN« button until the display shows »SCAN«.
- 4 Press and release the »SELECT/INFO« button. Your radio will perform a scan of the Band III DAB channels. As new stations are found, the station counter on the right-hand side of the display will increase and stations will be added to the list.

### Manual tuning

Manual tuning allows you to tune your radio to a particular DAB frequency in Band III. Any new stations found will be added to the station list. This function can also be used to assist the positioning of the aerial or the radio to optimise reception for a specific channel or frequency. Note that UK DAB stations are located in the range of channels 11B to 12D.

- 1 Press and release the »MENU« button, the display will show DAB menu.
- 2 Press and release the »TUNING UP« or »DOWN« button until »MANUAL« shows on the display.
- 3 Press and release the »SELECT/INFO« button to enter manual tuning mode.
- 4 Press and release the »TUNING UP« or »DOWN« button to select the desired DAB channel. Press and release the »SELECT/INFO« button to tune to the chosen frequency.

- 5 If a signal is present, this will be indicated on a signal strength display. The minimum signal marker (|) shows the minimum signal strength needed for good DAB reception. The signal indicator chevrons increase or decrease showing the changing signal strength as you adjust the telescopic aerial or your radio position.
- 6 When a DAB signal is found, the display will show the name of the DAB station. Any new radio stations found will be added to the list stored in the radio.
- 7 Press and release the »SELECT/INFO« button to return to normal tuning.

### Dynamic Range Control (DRC)

The DRC function can make quieter sounds easier to hear when your radio is used in a noisy environment.

- 1 Press the »ON/OFF« button to switch on your radio.
- 2 Press and release the »MENU« button, the display will show DAB menu.
- 3 Press and release the »TUNING UP« or »DOWN« button until » DRC « shows on the display.
- 4 Press and release the »TUNING UP« or »DOWN« button to enter adjustment mode.
- 5 Press and release the »TUNING UP« or »DOWN« button to select required DRC setting (default is 0).
  - DRC 0 DRC is switched off, Broadcast DRC will be ignored.
  - DRC 1/2 DRC level is set to 1/2 that sent by broadcaster.
  - DRC 1 DRC is set as sent by broadcaster.
- 6 Press and release the »SELECT/INFO« button to confirm the setting. The display will return to the station name display after several seconds.

**Note:** Not all DAB broadcasts use the DRC function. If the broadcast does not provide DRC information, then the DRC setting in the radio will have no effect.

### Prune stations

If you move to a different part of the country, some of the stations which were listed may no longer be available. Also, from time to time, some DAB services may stop broadcasting, or may change location or frequency.

Stations which cannot be found, or which have not been received for a very long time are shown in the station list with a question mark.

The Prune stations function will delete the marked DAB stations from your station list.

- 1 Press the »ON/OFF« button to switch on your radio.
- 2 Repeatedly, press and release the »DAB/FM« button until the DAB mode is selected.
- 3 Press and release the »MENU« button. The DAB menu will show on the display.
- 4 Press and release the »TUNING UP« or »DOWN« button until »PRUNE« shows on the display. Press and release the »SELECT/INFO« button.
- 5 Press and release the »SELECT/INFO« button and »SELECT« will show on the display.
- 6 Press the »SELECT/INFO« button to remove the invalid station names from the station list. The display will return to station name display after several seconds.

If you do not wish to prune stations press the »MENU« button to return to the previous display.

**Note:** If you have moved your radio to a different part of the country you should also carry out a search for new stations (please see the section ‘Finding the new stations’).

## FM MODE

### Auto Save to presets

After factory reset, the radio will scan for all the available DAB and FM stations. The scanned FM stations will be stored into 20 FM presets.

### Auto-tune

- 1 Carefully extend the telescopic aerial.
- 2 Press the »ON/OFF« button to switch on your radio.
- 3 Repeatedly, press and release the »DAB/FM« button until the FM mode is selected.
- 4 Press and hold the »SELECT/INFO« button. Your radio will scan in an upward direction (low frequency to high frequency) and stop automatically when it finds a station of sufficient strength.
- 5 After a few seconds the display will update. The display will show the frequency of the signal found. If the signal is strong enough and there is

RDS data present then the radio will display the station name.

- 6 Press and hold the »SELECT/INFO« button to scan the FM band in a downward direction (high frequency to low frequency).
- 7 When the waveband end is reached your radio will recommence tuning from the opposite waveband end.
- 8 Press and release the Volume – or + button to the required setting.
- 9 To switch off your radio press the »ON/OFF« button.

### Manual tuning

- 1 Carefully extend the telescopic aerial.
- 2 Press and release the »ON/OFF« button to switch on your radio.
- 3 Repeatedly, press and release the »DAB/FM« button until the FM mode is selected.

- 4 Press and release the »TUNING UP« or »DOWN« button to tune to a station. The frequency will change in steps of 50kHz.

If the radio is tuned to a station of sufficient signal strength with RDS information present, then the display may change to show the station name.

- 5 When the waveband end is reached the radio will recommence tuning from the opposite waveband end.
- 6 Set the » VOLUME « to the desired setting.
- 7 To switch off your radio press and release the »ON/OFF« button.

### 8 Display options

In FM mode, your radio can display a range of information on the bottom line of the display.

Press the »SELECT/INFO« button to cycle through the various modes.

- 1 **Scrolling text:** Displays scrolling text messages such as artist/track name, phone in number etc.
- 2 **Programme type:** Displays type of station being listened to e.g. Pop, Classic, News etc.
- 3 **Frequency:** Displays the current frequency
- 4 **Time:** Displays current time.
- 5 **Date:** Displays current date.

### Scan sensitivity setting

Your radio will normally scan for FM broadcasts that are strong enough to give good reception. However, you may wish the Auto-scan function to also be able to find weaker signals, possibly from more distant radio transmitters. Your radio includes a local / distant option for the Auto-scan.

- 1 Press and release the »ON/OFF« button to switch on your radio.
- 2 Repeatedly, press and release the »DAB/FM« button until the FM mode is selected.
- 3 Press and release the »MENU« button. The FM menu will show on the display.
- 4 Press and release the »TUNING UP« or »DOWN« button until »SCAN« shows on the display. Press and release the »SELECT/INFO« button.
- 5 Press and release the »TUNING UP« or »DOWN« button to switch between »LOCAL« and » DISTANT « options on the display. The Distant option will allow the radio to find weaker signals when scanning.
- 6 Press and release the »SELECT/INFO« button to confirm your selection. The radio will then revert to the normal information display. The Local or Distant setting is stored in the radio and remains in force until changed or until a System Reset.

**Note:**The initial setting (out of the box, or after a System Reset) causes the radio to ignore weaker (or more distant) signals.

## PRESETTING STATIONS

You may store your preferred DAB and FM radio stations to the preset station memories. There are 40 memory presets in your radio, 20 for DAB and 20 for FM. Presets are remembered by your radio in the event of a power failure.

The procedure for setting presets and using them to tune stations is the same for FM and DAB modes, and is described below.

- 1 Press and release the »ON/OFF« button to switch on the radio.
- 2 Repeatedly, press and release the »DAB/FM« button to select either the FM or DAB mode.

- 3 Tune to the required station as previously described.

- 4 Press and hold the »PRESET« button until the display is blinking. Press and release »TUNING UP« or »DOWN« button to choose an empty preset, for example, »EMPTY 1« Press and release »SELECT/INFO« button, the display shows »P1 SAVED«. The Current tuned station will be stored. Repeat this procedure for the remaining presets as needed.

- 5 Stations which have been stored in preset memories may be overwritten by following the above procedure.

## RECALLING A PRESET STATION

- 1 Press and release the »ON/OFF« button to switch on the radio.
- 2 Press and release the »DAB/FM« button to select either the FM or DAB mode.

- 3 Press and release the »PRESET« button, during the display is blinking, press and release »TUNING UP« or »DOWN« button to choose the required preset, then press and release »SELECT/INFO« button, your radio will tune to the station stored in preset memory.

**Note:** The display will show, »Empty 1« if no station has been stored to that preset.

## TIMER MODE

### Synchronise the time from either DAB or FM

- 1 Switch on the radio by pressing »ON/OFF« button, then press and release the »MENU« button to activate the menu setting.
- 2 Press the »TUNING UP« or »DOWN« button to find » SYSTEM «, then press the »SELECT/INFO« button to enter system menu;
- 3 Press the »TUNING UP« or »DOWN« button to find »TIME«, then press the »SELECT/INFO« button to enter;
- 4 Press the »TUNING UP« or »DOWN« button to find »UPDATE«, then press the »SELECT/INFO« button to enter;
- 5 Now you can use the »TUNING UP« or »DOWN« button to choose the time source from »ANY«, »DAB«, »FM« or »NO UPDATE«, then press the »SELECT/INFO« button to enter system menu;

### Manual time setting

- 1 You can enter the time manually by following the step 1 to 3 in the “Synchronise the time from either DAB or FM” section.
- 2 Select »SET TIME«, then press the »SELECT/INFO« button to enter manual time setting menu.
- 3 Please use the »TUNING UP« or »DOWN« button to select the desired time and date, and use the »SELECT/INFO« button to confirm the settings

### Setting the alarm time

- 1 Press the »ON/OFF« button to switch on the radio to either DAB or FM mode;
- 2 Press and hold the »ALARMS« button, the radio will display the alarm menu by blinking the alarm 1 icons;
- 3 Press the »TUNING UP« or »DOWN« button to choose if you want to set up alarm 1 or alarm 2 Press the »SELECT/INFO« button to confirm the alarm you want to setup.
- 4 Please choose » ON « to activate the alarm, or » OFF « to deactivate the alarm, then press the »SELECT/INFO« button to move to the next step.
- 5 Please use the »TUNING UP« or »DOWN« button to select the alarm time, and use the »SELECT/INFO« button to move to the next step.







environnement bruyant.

- Appuyez sur le bouton **»ON/OFF«** pour mettre la radio en marche.
- Appuyez et relâchez le bouton **« MENU »**, l’écran affiche le menu DAB.
- Appuyez et relâchez le bouton **« AVANCER ou RECULER »** jusqu’à ce que « DRC » s’affiche à l’écran.
- Appuyez et relâchez le bouton **« AVANCER ou RECULER »** pour accéder au mode réglage.
- Appuyez et relâchez le bouton **« SELECT / INFO »** pour sélectionner le réglage nécessaire du canal DAB (0 par défaut).

DRC 0	DRC est désactivé, diffusion DRC sera ignorée.
DRC 1/2	Le niveau DRC est réglé à la moitié de celui envoyé par le diffuseur.

<span></span>	<span></span>
---------------	---------------

DRC 1	DRC est réglé tel qu’envoyé par le diffuseur.
-------	---

- Appuyez sur le bouton **« SÉLECTION/INFO »**, puis relâchez-le pour confirmer le réglage. L’écran retourne à l’écran du nom de la station après plusieurs secondes.

**Remarque** : Toutes les émissions DAB n’utilisent pas la fonction DRC. Si l’émission ne fournit pas d’informations DRC, le réglage DRC de la radio .n’aura aucun effet

#### Supprimer stations

Si vous changez de région dans le même pays, certaines stations de radio figurant dans la liste peuvent ne plus être disponibles. De même, certains services DAB peuvent, de temps à autre, cesser de diffuser ou changer de lieu ou de fréquence.

Les stations qui ne peuvent pas être trouvées ou qui n’ont pas été reçues pendant une très longue période sont affichées dans la liste des stations avec un point d’interrogation.

La foncion Éliminer stations supprime les stations DAB marquées de la liste des stations.

- Appuyez sur le bouton **»ON/OFF«** pour mettre la radio en marche.
- Appuyez sur le bouton **« MENU »** et maintenez-le enfoncé plusieurs fois jusqu’à ce que le mode soit sélectionné.
- Appuyez sur le bouton **« MENU »**. Le menu s’affiche à l’écran.
- Appuyez et relâchez le bouton **« AVANCER »** ou **« RECULER »** jusqu’à ce que **« SUPPRIMER STATIONS DAB »** s’affiche à l’écran. Appuyez et relâchez le bouton **« SÉLECTION/INFO »**.
- Appuyez sur le bouton **« SÉLECTION/INFO »** pour supprimer les noms de stations invalides de la liste des stations. L’écran retourne à l’écran du nom de la station après plusieurs secondes.

Si vous ne souhaitez pas supprimer les stations, appuyez sur le bouton **« DAB/FM »** pour revenir à l’affichage précédent.

**Remarque** : Si votre radio se trouve dans une autre partie du pays, vous devez également effectuer une recherche de nouvelles stations (voir la section « Trouver de nouvelles stations »).

### FM MODE

#### Sauvegarde automatique dans les préséglages

Après la réinitialisation d’usine, la radio recherche toutes les stations DAB et FM disponibles. Les stations FM balayées seront stockées dans 20 préséglages FM.

#### Auto-réglage

- Déployez avec précaution l’antenne télescopique.
- Appuyez sur le bouton **»ON/OFF«** pour mettre la radio en marche.

- Appuyez sur le bouton **« DAB/FM »** et maintenez-le enfoncé plusieurs fois jusqu’à ce que le mode FM soit sélectionné.

- Appuyez sur le bouton **« SÉLECTION/INFO »** et maintenez-le enfoncé. Votre radio balaie vers le haut (de basse fréquence à haute fréquence) et s’arrête automatiquement lorsqu’elle trouve une station suffisamment puissante.

- Après quelques secondes, l’affichage se met à jour. L’écran indique la fréquence du signal trouvé. Si le signal est suffisamment fort et qu’il y a des données RDS présentes, la radio affiche le nom de la station.

- Appuyez sur le bouton **« SÉLECTION/INFO »** et maintenez-le enfoncé pour balayer la bande FM vers le bas (de haute fréquence à basse fréquence).

- Lorsque l’extrémité de la bande d’ondes est atteinte, votre radio recommencera à rechercher à partir de l’extrémité opposée de la bande

<span></span>	<span></span>
<span></span>	<span></span>
<span></span>	<span></span>
<span></span>	<span></span>
<span></span>	<span></span>
<span></span>	<span></span>
<span></span>	<span></span>
<span></span>	<span></span>

- Réglez le volume au niveau souhaité en appuyant et en les relâchant les boutons Volume - ou +.

- Pour éteindre la radio, appuyez sur le bouton **« ON/OFF »**

##### Réglage manuel

- Déployez avec précaution l’antenne télescopique.

- Appuyez sur le bouton **« ON/OFF »**, puis relâchez-le pour mettre la radio en marche.

- Appuyez sur le bouton **« DAB/FM »** et maintenez-le enfoncé plusieurs fois jusqu’à ce que le mode FM soit sélectionné.

- Appuyez et relâchez le bouton **« AVANCER »** ou **« RECULER »** pour aller à une station. La fréquence changera par intervalles de 50 kHz.

- Si la radio est réglée sur une station dont l’intensité du signal est suffisante avec des informations RDS, l’affichage peut changer pour afficher le nom de la station.

<span></span>	<span></span>
<span></span>	<span></span>
<span></span>	<span></span>
<span></span>	<span></span>
<span></span>	<span></span>
<span></span>	<span></span>
<span></span>	<span></span>
<span></span>	<span></span>
<span></span>	<span></span>
<span></span>	<span></span>
<span></span>	<span></span>

- Lorsque l’extrémité de la bande d’ondes est atteinte, la radio recommence à chercher à partir de l’extrémité opposée de la bande d’ondes.

- Réglez le **« VOLUME »** au niveau désiré.

- Pour éteindre votre radio, appuyez et relâchez le bouton **« ON/OFF »**.

#### Options d’affichage

En mode FM, votre radio peut afficher une série d’informations sur la ligne inférieure de l’écran.

Appuyez sur le bouton **« SÉLECTION /INFO »** pour faire défiler les différents modes.

**a. Texte défilant :**

Affiche des messages texte défilants tels que le nom de l’artiste/de la piste, etc.

**b. Type de programme :**

Affiche le type de station en cours (Pop, Classique, Actualité, etc.)

**c. Fréquence :**

Affiche la fréquence actuelle.

<b>d. Heure<span> </span>:</b>
Affiche l’heure actuelle.
<b>e. Date<span> </span>:</b>
Affiche la date du jour.

#### Sensibilité du réglage du balay-age

Votre radio recherche normalement les émissions FM suffisamment puissantes pour assurer une bonne réception. Cependant, vous souhaitez peut-être que la fonction « Auto-scan » soit également capable de trouver des signaux plus faibles, éventuellement à partir d’émetteurs radio plus éloignés. Votre radio inclut une option locale / distante pour le balayage automatique.

- Appuyez sur le bouton **« ON/OFF »**, puis relâchez-le pour mettre la radio en marche.

- Appuyez sur le bouton **« DAB/FM »** et maintenez-le enfoncé plusieurs fois jusqu’à ce que le

mode FM soit sélectionné.

- Appuyez et relâchez le bouton **« DAB/FM »**. Le menu FM s’affiche à l’écran.

- Appuyez et relâchez le bouton **« AVANCER »** ou **« RECULER »** jusqu’à ce que **« SCAN »** s’affiche à l’écran. Appuyez et relâchez le bouton **« SÉLECTION/INFO »**.

- Appuyez et relâchez le bouton **« AVANCER »** ou **« RECULER »** pour basculer entre les options **« LOCAL »** et **« DISTANT »** sur l’écran. L’option Distant permet à la radio de trouver les signaux les plus faibles lors du balayage.

- Appuyez et relâchez la touche **« SÉLECTION/ INFO »** pour confirmer votre sélection. La radio revient alors à l’affichage normal des informations. Le réglage Local ou Distant est mémorisé dans la radio et reste en fonction jusqu’à ce qu’il soit modifié ou jusqu’à une réinitialisation du système.

<span></span>	<span></span>
<span></span>	<span></span>
<span></span>	<span></span>
<span></span>	<span></span>
<span></span>	<span></span>
<span></span>	<span></span>
<span></span>	<span></span>
<span></span>	<span></span>

**Remarque** : Le réglage initial (d’origine ou après une réinitialisation du système) fait que la radio ignore les signaux plus faibles (ou plus éloignés).

### PRÉRÉGLER DES STATIONS

Vous pouvez enregistrer vos stations radio DAB et FM préférées dans les mémoires des stations pré-réglées. Vous pouvez enregistrer jusqu’à 40 stations préséglées dans votre radio, 20 pour le DAB et 20 pour le FM. Les préséglages sont mémorisés par votre radio en cas de panne de courant.

La procédure pour configurer les préséglages et les utiliser pour régler les stations est la même pour les modes FM et DAB, et est décrite ci-dessous.

- Appuyez sur le bouton **« ON/OFF »**, puis relâchez-le pour mettre la radio en marche.

- Appuyez sur le bouton **« DAB/FM »** et maintenez-le enfoncé plusieurs fois pour sélectionner soit le mode FM, soit le mode DAB.

<span></span>	<span></span>
<span></span>	<span></span>
<span></span>	<span></span>
<span></span>	<span></span>
<span></span>	<span></span>
<span></span>	<span></span>
<span></span>	<span></span>
<span></span>	<span></span>
<span></span>	<span></span>
<span></span>	<span></span>
<span></span>	<span></span>

- Appuyez sur le bouton **« PRESET »** et maintenez-le enfoncé jusqu’à ce que l’affichage indique, par exemple, **« VIDE 1, ou VIDE 2.. »**. La station actuellement réglée est mémorisée sous le bouton **« PRÉSÉLECTIONS »** choisi (1, 2 ou 3..) Répétez cette procédure pour les autres préséglages si nécessaire.

- Les stations qui ont été stockées dans les pré-réglages peuvent être écrasées en suivant la procédure ci-dessus **«P1, P2, P3 ou ENREG1»,** s’affiche à l’écran..

<span></span>	<span></span>
<span></span>	<span></span>
<span></span>	<span></span>
<span></span>	<span></span>
<span></span>	<span></span>
<span></span>	<span></span>
<span></span>	<span></span>
<span></span>	<span></span>
<span></span>	<span></span>
<span></span>	<span></span>
<span></span>	<span></span>

### RAPPELER UNE STATION PRÉENREGISTRÉE

- Appuyez sur le bouton **« ON/OFF »**, puis relâchez-le pour mettre la radio en marche.

- Appuyez sur le bouton **« DAB/FM »** et maintenez-le enfoncé pour sélectionner soit le mode FM, soit le mode DAB.

- Appuyez et relâchez le bouton **« PRÉSÉLECTIONS »** désiré. Vous pouvez choisir votre radio préséglée P1, P2 ou P3..

**Remarque** : L’afficheur indique « Vide 1 » si aucune station n’a été mémorisée dans les préséglages.

### RÉGLAGES HEURE/DATE/ALARME

#### Synchroniser l’heure à partir de DAB ou de FM

- Allumez la radio en appuyant sur le bouton **»ON/OFF«** puis actionner et maintenir le bouton **»MENU«** pendant deux secondes pour activer le menu Réglages.

- Appuyez sur le bouton **« AVANCER »** ou **« RECULER »** pour trouver **« SYSTÈME »** puis appuyez sur le bouton **« SÉLECTION/INFO »** pour accéder au menu Système ;

- Appuyez sur le bouton **« AVANCER »** ou **« RECULER »** pour trouver **« HEURE »** puis appuyez sur le bouton **« SÉLECTION/INFO »** pour accéder au menu ;

- Appuyez sur le bouton **« AVANCER »** ou **« RECULER »** pour trouver **« MISE À JOUR »** puis appuyez sur le bouton **« SÉLECTION/INFO »** pour accéder au menu ;

- Il est désormais possible d’utiliser le bouton **« AVANCER »** ou **« RECULER »** pour choisir la source horaire entre **« N’IMPORTE LAQUELLE »**, **« DAB »**, **« FM »** ou **« AUCUNE »**, puis appuyer sur le bouton **« SÉLECTION/**

<span></span>	<span></span>
<span></span>	<span></span>
<span></span>	<span></span>
<span></span>	<span></span>
<span></span>	<span></span>
<span></span>	<span></span>
<span></span>	<span></span>
<span></span>	<span></span>
<span></span>	<span></span>
<span></span>	<span></span>
<span></span>	<span></span>

#### Réglage manuel de l’heure / date

- Il est possible de saisir manuellement l’heure en suivant les étapes 1 à 3 dans la section **« Synchroniser l’heure à partir de DAB ou de FM »**.

- Sélectionner **»DEFINIR L’HEURE/LA DATE«** puis appuyer sur le bouton **« SÉLECTION/INFO »** pour accéder au réglage manuel de l’heure.

- Utilisez le bouton **« AVANCER »** ou **« RECULER »** pour sélectionner l’heure et la date souhaitées et utilisez le bouton **« SÉLECTION/INFO »** pour confirmer les réglages.

#### Réglage de l’heure de l’alarme

- Appuyez sur le bouton **« ON/OFF »** pour mettre la radio en service en mode FM ou DAB

<span></span>	<span></span>
<span></span>	<span></span>
<span></span>	<span></span>
<span></span>	<span></span>
<span></span>	<span></span>
<span></span>	<span></span>
<span></span>	<span></span>
<span></span>	<span></span>
<span></span>	<span></span>
<span></span>	<span></span>
<span></span>	<span></span>
<span></span>	<span></span>

- Choisissez **« ACTIVEE »** pour activer l’alarme ou **« DESACT »** pour la désactiver, puis appuyez sur le bouton **« SÉLECTION/INFO »** pour passer à l’étape suivante.

- Utilisez le bouton **« AVANCER »** ou **« RECULER »** pour sélectionner l’heure de l’alarme et utilisez le bouton **« SÉLECTION/INFO »** pour passer à l’étape suivante.

- Utilisez le bouton **« AVANCER »** ou **« RECULER »** pour sélectionner **« SEMAINE (weekdays) »**, **« WEEKENDS »**, **« TOUS LES JOURS (daily) »** ou **« UNE FOIS »**, puis

<span></span>	<span></span>
<span></span>	<span></span>
<span></span>	<span></span>
<span></span>	<span></span>
<span></span>	<span></span>
<span></span>	<span></span>
<span></span>	<span></span>
<span></span>	<span></span>
<span></span>	<span></span>
<span></span>	<span></span>
<span></span>	<span></span>

**Remarque** : Si l’alarme **« UNE FOIS »** est choisie, définir la date spécifique pour l’alarme.

- Utilisez le bouton **« AVANCER »** ou **« RECULER »** pour choisir l’alarme souhaitée entre **« DAB »**, **« FM »** et **« SONNERIE »** puis appuyez sur le bouton **« SÉLECTION/INFO »** pour confirmer les réglages.

**Remarque** : Si vous avez choisi **« DAB »** ou **« FM »** choisi comme source d’alarme, vous devez choisir la station de préséglage ou la dernière station écoutée du mode.

- Utilisez le bouton **« AVANCER »** ou **« RECULER »** pour choisir le volume de l’alarme souhaité, puis appuyez sur le bouton **« SÉLECTION/INFO »** pour confirmer les réglages. L’écran affiche **« SAUVEGARDÉ »** pour quitter la configuration de l’alarme.

**Remarque** : L’appareil vous réveille à l’heure d’alarme réglée, la durée de l’alarme est de 60 minutes.

**Remarque** : Après l’activation de l’alarme, l’icône d’alarme correspondante est allumée et ne clignote plus.

#### Répétition d’alarme

- Appuyez sur le bouton **« SÉLECTION/INFO »** lorsque l’alarme sonne.

- Pendant la répétition, l’icône répétition est allumée.

**Remarque** : Le signal de l’alarme s’arrête et l’alarme sonne de nouveau après cinq minutes.

#### Annuler l’alarme

- Appuyez sur **»ON/OFF«** lorsque l’alarme sonne.

**Remarque** : L’alarme sonnera de nouveau à l’heure d’alarme suivante réglée.

#### Activation et désactivation de l’alarme

- En mode veille, appuyez sur le bouton **« ALARMES »** pour activer l’alarme 1 ou l’alarme 2 avec les derniers paramètres d’alarme utilisés ou pour désactiver l’alarme.

##### Arrêt programmé

- Appuyez sur le bouton **ON/OFF** pour allumer la radio.

- Appuyez sur la touche **« MENU »** pour accéder au menu système en mode DAB ou FM.

- Appuyez ensuite plusieurs fois sur le bouton **« AVANCER »** ou **« RECULER »** pour sélectionner **« SYSTEME »** dans le menu système afin de démarrer les configurations de la minuterie de veille, puis appuyez sur la touche **« SÉLECTION/INFO »** pour entrer.

- Appuyez sur le bouton **« RECULER »** ou **« AVANCER »** pour sélectionner **« SLEEP »** puis sur la touche **« SÉLECTION/INFO »** pour confirmer.

<span></span>	<span></span>
<span></span>	<span></span>
<span></span>	<span></span>
<span></span>	<span></span>
<span></span>	<span></span>
<span></span>	<span></span>
<span></span>	<span></span>
<span></span>	<span></span>
<span></span>	<span></span>
<span></span>	<span></span>
<span></span>	<span></span>

Remarque : Si vous souhaitez désactiver l’arrêt programmé, réalisez les 5 étapes ci-dessus et lors de la 5eme étape sélectionner **« DESACTIVE »**.

## VERSION DU LOGICIEL

L’affichage du logiciel ne peut pas être modifié et n